



***OWNER'S MANUAL
F83 Treadmill***

*Please carefully read this entire manual
before operating your new treadmill.*

ATTENTION: *Before returning your Sole product to any retailer, or if you require any assistance with assembly or technical support please call us first for assistance at 866-780-7653. Thank you for your Sole purchase.*

TABLE OF CONTENTS

Product Registration	1
Important Safety Instructions	2
Important Electrical Information	3
Important Operation Instructions	4
Assembly instructions	5
Folding Instructions	12
Transport Instructions	12
Operation of Your New Treadmill	13
Bluetooth® Connectivity	25
Charging Function	26
General Maintenance	30
Service Checklist - Diagnosis Guide	33
Manufacturer's Limited Warranty	35



WARNING: This product can expose you to chemicals including Toluene and Acrylamide which are known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

Before returning your Sole product to any retailer, or if you require any assistance with assembly or technical support please call us first for assistance at 866-780-7653. Thank you for your Sole purchase.

SOLE

FITNESS

CONGRATULATIONS ON YOUR NEW TREADMILL AND WELCOME TO THE SOLE FAMILY!

Thank you for your purchase of this quality treadmill from **SOLE**. Your new treadmill has been manufactured by one of the leading fitness manufacturers in the world and is backed by one of the most comprehensive warranties available. **SOLE** will do all we can to make your ownership experience as pleasant as possible for many years to come.

If there is a question as to where to obtain service, contact our service department at **866-780-7653**.

Please take a moment at this time to record below the name of the dealer, their telephone number, and the date of purchase for easy contact in the future. We appreciate your confidence in **SOLE** and we will always remember that you are the reason that we are in business. Please complete and mail your registration card today and enjoy your new treadmill.

Yours in Health,
SOLE Fitness

Name of Dealer _____

Telephone Number of Dealer _____

Purchase Date _____

PRODUCT REGISTRATION

RECORD YOUR SERIAL NUMBER Please record the Serial Number of this fitness product in the space provided below.

Serial Number _____

REGISTER YOUR PURCHASE

The self-addressed product registration card must be completed in full and returned to **SOLE**.

You can also go to www.soletreadmills.com under the support tab to register online.



IMPORTANT SAFETY INSTRUCTIONS

WARNING - Read all instructions before using this appliance.

DANGER - To reduce the risk of electric shock disconnect your SOLE treadmill from the electrical outlet prior to cleaning and/or service work.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons, install the treadmill on a flat level surface with access to a 120-volt, 15-amp grounded outlet with only the treadmill plugged into the circuit.

DO NOT USE AN EXTENSION CORD UNLESS IT IS A 14AWG OR BETTER, WITH ONLY ONE OUTLET ON THE END: DO NOT ATTEMPT TO DISABLE THE GROUNDED PLUG BY USING IMPROPER ADAPTERS, OR IN ANY WAY MODIFY THE CORD SET.

A serious shock or fire hazard may result along with computer malfunctions. See Grounding Instructions, page 3.

- Do not operate treadmill on deeply padded, plush or shag carpet. Damage to both carpet and treadmill may result.
- Do not block the rear of the treadmill. Provide a minimum of 3 1/2 feet clearance between the rear of the treadmill and any fixed object.
- Keep children under the age of 13 away from this machine. There are obvious pinch points and other caution areas that can cause harm.
- Keep hands away from all moving parts.
- Never operate the treadmill if it has a damaged cord or plug. If the treadmill is not working properly, call your dealer.
- Keep the cord away from heated surfaces.
- Do not operate where aerosol spray products are being used or where oxygen is being administered. Sparks from the motor may ignite a highly gaseous environment.
- Never drop or insert any object into any openings.
- Do not use outdoors.
- To disconnect, turn all controls to the off position, remove tether cord, then remove the plug from the outlet.
- Do not attempt to use your treadmill for any purpose other than for the purpose it is intended.
- The pulse sensors are not medical devices. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensors are intended only as exercise aids in determining heart rate trends in general.
- Use handrails provided; they are for your safety.
- Wear proper shoes. High heels, dress shoes, sandals or bare feet are not suitable for use on your treadmill. Quality athletic shoes are recommended to avoid leg fatigue.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Remove tether cord after use to prevent unauthorized treadmill operation. SAVE THESE INSTRUCTIONS - THINK SAFETY!

IMPORTANT ELECTRICAL INSTRUCTIONS

WARNING!

Route the power cord away from any moving part of the treadmill including the elevation mechanism and transport wheels.

NEVER remove any cover without first disconnecting AC power.

If voltage varies by ten percent (10%) or more, the performance of your treadmill may be affected. Such conditions are not covered under your warranty. If you suspect the voltage is low, contact your local power company or a licensed electrician for proper testing.

NEVER expose this treadmill to rain or moisture. This product is NOT designed for use outdoors, near a pool or spa, or in any other high humidity environment. The maximum operating temperature specification is 40 degrees C, and humidity is 95% non-condensing (no water drops forming on surfaces).

Circuit breakers: Avoid AFCI/GFCI circuit breakers if possible. These breakers may trip occasionally during exercise because of the high inrush currents of the treadmill drive electronics and motor. This is an issue that affects all treadmill brands.

New laws in your area may require these breakers. If you do have these breakers and outlets in your home, and are experiencing nuisance tripping, you should check if there are any other devices plugged into the same circuit. Some examples of devices that may also cause tripping are fluorescent lights with electronic ballasts, coffee maker, space heater, hair drier. Optimally the treadmill should be the only device plugged into the circuit.


Our treadmills have surge suppressors built in to help avoid nuisance tripping. We have tested several AFCI/GFCI breakers and outlets with our products. Brands we have tested are: Eaton (Cutler Hammer Series), Leviton (Smart lock pro) and Schneider Electric (Canadian home series). These breakers do not trip in our testing, when connected to our treadmills, as long as no other devices are plugged into the same circuit.

GROUNDING INSTRUCTIONS

This product must be grounded. If the treadmill should malfunction or breakdown, grounding provides a path of least resistance for electric current, reducing the risk of electric shock. This product is equipped with a cord having an equipment-grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated below. A temporary adapter that looks like the adapter illustrated below may be used to connect this plug to a 2-pole receptacle as shown below if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet, (shown below) can be installed by a qualified electrician. The green colored rigid earlug, or the like, extending from the adapter, must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

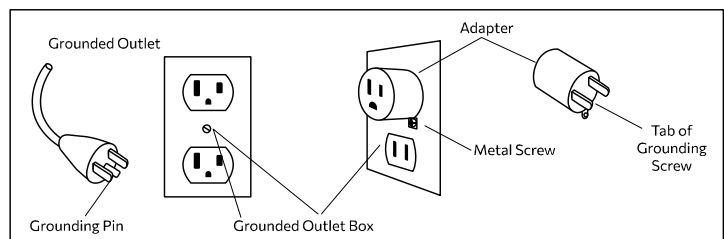

IMPORTANT OPERATION INSTRUCTIONS

- **NEVER** operate this treadmill without reading and completely understanding the results of any operational change you request from the computer.
- Understand that changes in speed and incline do not occur immediately. Set your desired speed on the computer console and release the adjustment key. The computer will obey the command gradually.
- **NEVER** use your treadmill during an electrical storm. Surges may occur in your household power supply that could damage treadmill components. Unplug the treadmill during an electrical storm as a precaution.
- Use caution while participating in other activities while walking on your treadmill; such as watching television, reading, etc. These distractions may cause you to lose balance or stray from walking in the center of the belt; which may result in serious injury.
- **NEVER** mount or dismount the treadmill while the belt is moving. **SOLE** treadmills start at a very low speed and it is unnecessary to straddle the belt during start up. Simply standing on the belt during slow acceleration is proper after you have learned to operate the unit.
- Always hold on to a handrail or hand bar while making control changes (incline, speed, etc.).
- Do not use excessive pressure on console control keys. They are precision set to function properly with little finger pressure. Pushing harder is not going to make the unit go faster or slower. If you feel the buttons are not functioning properly with normal pressure contact your **SOLE** dealer.

IMPORTANT SAFETY INSTRUCTIONS

A safety tether cord is provided with this unit and should be used at all times. It is for your safety should you fall or move too far back on the tread-belt. Pulling this safety tether cord will stop tread-belt movement.

To Use:

1. Place the safety key into position on the console control head. Your treadmill will not start and operate without this. Removing the safety key also secures the treadmill from unauthorized use.
2. Fasten the plastic clip onto your clothing securely to assure good holding power.
Note: *The clip should be attached securely to make certain it does not come off. Be familiar with its function and limitations. The treadmill will stop, depending on speed, with a one to two step coast anytime the safety key is pulled off the console. Use the red **Stop** switch in normal operation.*
3. If the console displays "Safety key removed, machine stopped, click Replace the key to Operate", put the Safety key back to continue using the treadmill.

IMPORTANT SAFETY INSTRUCTIONS

READ BEFORE UNPACKING YOUR FOLDING TREADMILL

Serious injury could occur if this folding treadmill is not unpacked properly.

There is a deck restraint SHIPPING strap installed around the treadmill base that prevent the treadmill from unfolding accidentally during shipping. If this strap is not removed properly the treadmill could spring open unexpectedly and cause injury if someone is standing near the treadmill when the strap is removed.

To ensure your personal safety during removal of the shipping strap please make sure the treadmill is positioned flat on the ground, in the orientation it would be in if you were using the treadmill. Do not tilt the treadmill up on its side while removing the shipping strap: this could cause the treadmill's folding mechanism to spring open. To remove the strap, pull up on the strap and cut it with a pair of scissors.

There is a safety pin locked on the treadmill base that prevents the treadmill from unfolding accidentally during shipping. This safety pin has to be removed before powering on or using the incline function to avoid any damages to the machine. When removing the safety pin, pull it away from the treadmill base completely.



F83 ASSEMBLY INSTRUCTIONS

Scan Here for Assembly Video






F83 ASSEMBLY PACK CHECKLIST




2 HARDWARE STEP 2

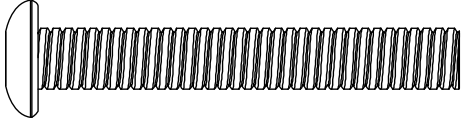	
#214. Ø8 × 1.5T_ Split Washer (8 pcs)	#250. 5/16" × 3"_ Button Head Socket Bolt (8 pcs)


3 HARDWARE STEP 3

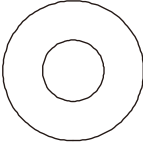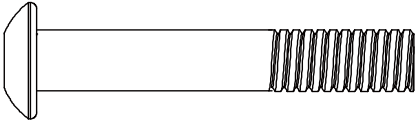		
#214. Ø8 × 1.5T_ Split Washer (4 pcs)	#215. Ø5/16" × Ø18 × 1.5T_ Flat Washer (4 pcs)	#220 5/16" × 65mm_ Button Head Socket Bolt (4 pcs)


4 HARDWARE STEP 4

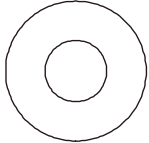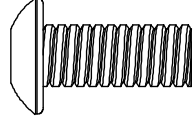		
#215. Ø5/16" × Ø18 × 1.5T_ Flat Washer (2 pcs)	#214. Ø8 × 1.5T_ Split Washer (2 pcs)	#235 5/16" × 3/4"_ Button Head Socket Bolt (4 pcs)

5 HARDWARE STEP 5

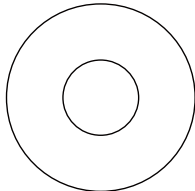
		
#252. M5 × P0.8 × 12mm_ Phillips Head Screw (4 pcs)	#263. 3/8" × UNC16 × 3/4"_ Socket Head Cap Bolt (4 pcs)	#264. Ø3/8" × 25 × 2T Flat Washer (4 pcs)

6 HARDWARE STEP 6



#252. M5 × P0.8 × 12mm_
Phillips Head Screw
(4 pcs)


ASSEMBLY TOOLS

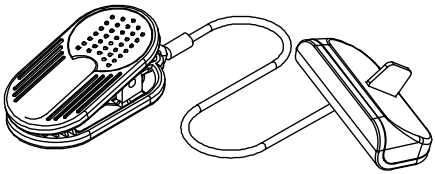


#32. Safety Key




#49. End Cap

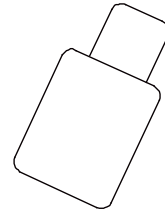

#200. Lubricant

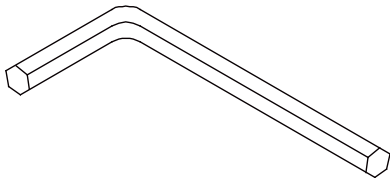


#262. M6_L Allen Wrench

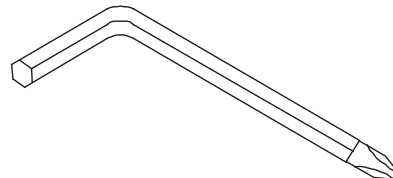

#253. Allen Wrench Head Screw Wrench


F83 ASSEMBLY INSTRUCTIONS

1 ASSEMBLY STEP 1

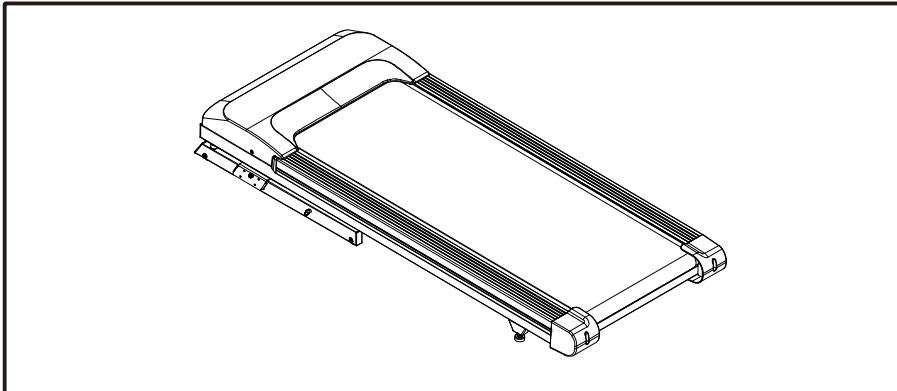

1. Remove the treadmill from the carton and position it aside on a smooth, level floor. The rear should be at least 3' from any wall. Do not remove the Velcro belt until you have removed the plastic wrap and Styrofoam from beneath the unit. **Turning the unit on its side after removing the belt may cause the unit fold up and cause serious injury!**

2 ASSEMBLY STEP 2

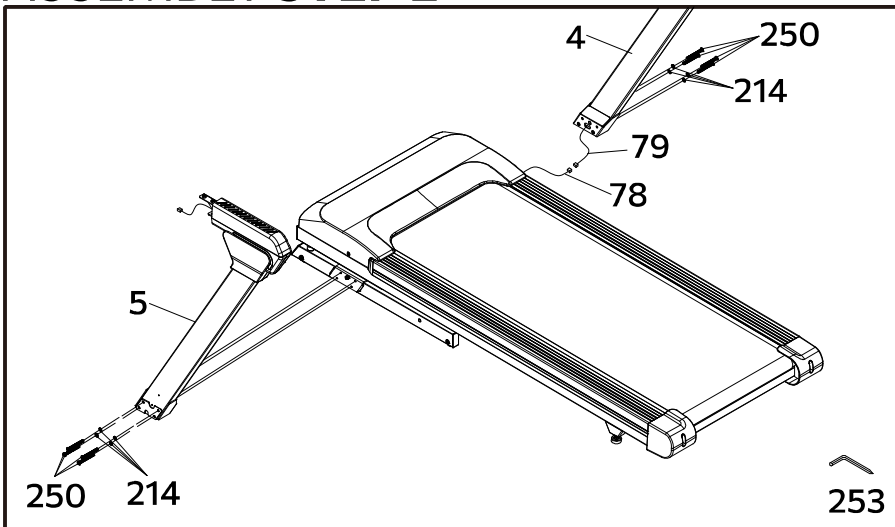


HARDWARE STEP 2

- #214. $\text{Ø}8 \times 1.5\text{T}$ Split Washer (8 pcs)
- #250. $5/16" \times 3"$ Button Head Socket Bolt (8 pcs)

1. Connect the Computer Cable (Middle) (79) on the Right Upright (4) to the Computer Cable (Lower) (78).
2. Attach the Left and Right Upright (5, 4) using the following tools and parts: M5_Allen Wrench Head Screw Wrench (253) Button Head Socket Bolt (250)8pcs Split Washer (214)8pcs. **Note: Do not fully tighten the screws yet. Before attaching the hardware to Step 3, make sure the cables you just connected don't get pinched in between the steel tubing. If they do, this may cause issues that prevent the treadmill from operating properly.**

3 ASSEMBLY STEP 3

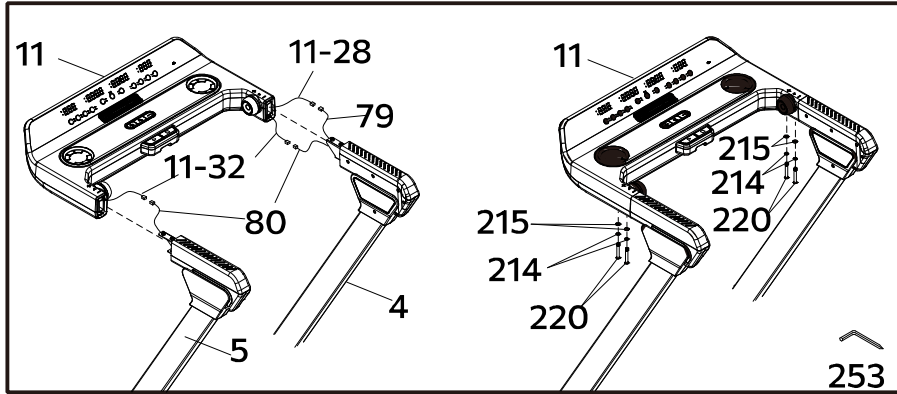


HARDWARE STEP 3

- #214. Ø8 × 1.5T_Split Washer (4 pcs)
- #215. Ø5/16" × Ø18 × 1.5T_Flat Washer (4 pcs)
- #220 5/16" × 65mm_Button Head Socket Bolt (4 pcs)

1. Connect the Computer Cable (Middle) (79) on the Right Upright (4) to the Computer Cable (Upper) (11-28) on the Console Outer Cover Assembly (11). Connect the Monochrome light strip (80) on the Left and Right Upright (5, 4) to the Connecting Wire (11-32).
2. Attach the Left and Right Upright (5, 4) using the following tools and parts: M5_Allen Wrench Head Screw Wrench (253) Button Head Socket Bolt (220)4pcs plit Washer (214)4pcs Flat Washer (215)4pcs. **Note: Do not fully tighten the screws yet. Before attaching the hardware to Step 4, make sure the cables you just connected don't get pinched in between the steel tubing. If they do, this may cause issues that prevent the treadmill from operating properly.**

4 ASSEMBLY STEP 4

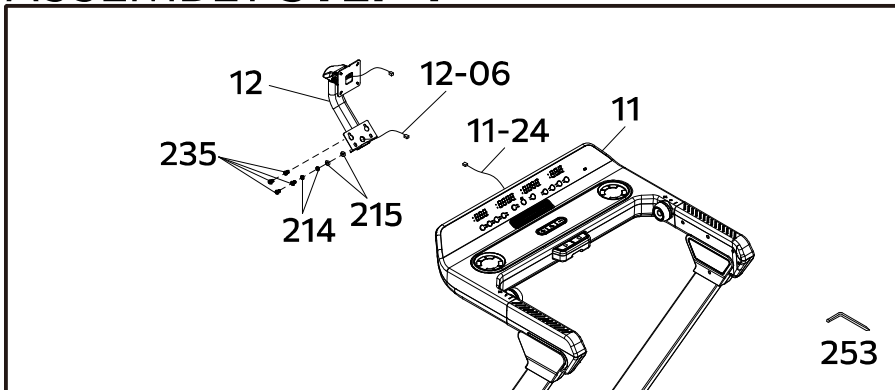


HARDWARE STEP 4

- #214. Ø8 × 1.5T_Split Washer (2 pcs)
- #215. Ø5/16" × Ø18 × 1.5T_Flat Washer (2 pcs)
- #235 5/16" × 3/4"_Button Head Socket Bolt (4 pcs)

1. Connect the Computer Cable (Middle) (12-06) on the Console Rotate Axle Assembly (12) to the Computer Cable (Lower) (11-24) on the Console Outer Cover Assembly (11).
2. Attach the Console Rotate Axle Assembly (12) and the Console Outer Cover Assembly (11) using the following tools and parts: M5_Allen Wrench Head Screw Wrench (253) Button Head Socket Bolt (235)4pcs Split Washer (214)2pcs Flat Washer (215)2pcs. **Note: The two upper screws(235) can be loosely attached first to make it easier to align and hang the Console Rotate Axle Assembly during installation. Do not fully tighten the screws yet.**

5 ASSEMBLY STEP 5-1

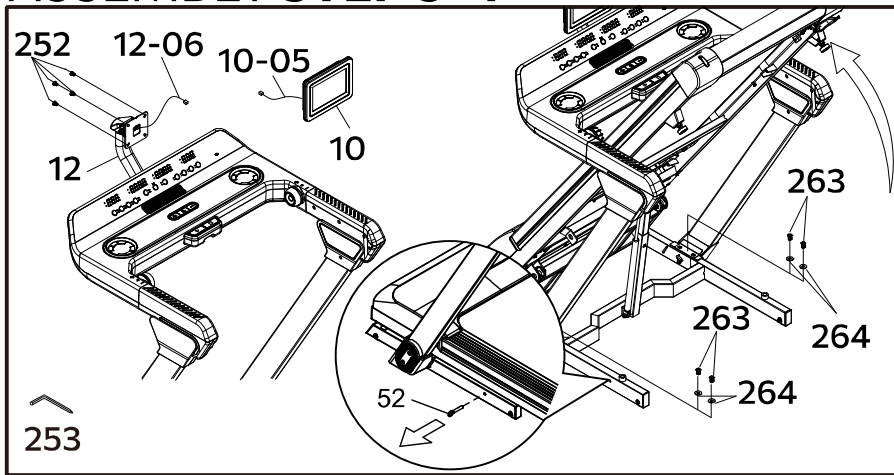


HARDWARE STEP 5

- #252. M5 × P0.8 × 12mm_Phillips Head Screw (4 pcs)
- #263. 3/8" × UNC16 × 3/4" _Socket Head Cap Bolt (4 pcs)
- #264. Ø3/8" × 25 × 2T_Flat Washer (4 pcs)


1. Connect the Console Rotate Axle Assembly (12) Computer Cable (Middle) (12-06) to the Console Assembly (10) Computer Cable (Upper) (10-05).
 2. Attach the Console Rotate Axle Assembly (12) and Console Assembly (10) using the following tools and parts: M5_Allen Wrench Head Screw Wrench (253) Phillips Head Screw (252)4pcs.
 3. Remove the Locking Pin (52), then lift up the running deck.
 4. After lifting up the running deck, use the M5_Allen Wrench Head Screw Wrench (253) and secure with Button Head Socket Bolts (263) 4 pcs, and Flat Washers (264) 4 pcs.
- Note: After above assembly, tighten the screws in place.**

ASSEMBLY STEP 5-2

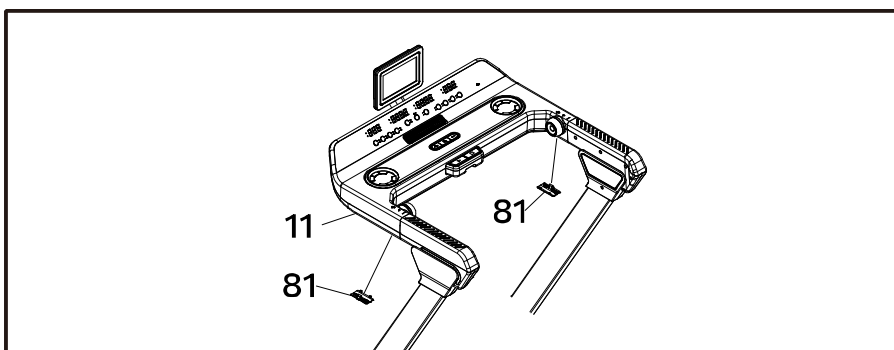

1. Cover the screw holes on the Console Outer Cover Assembly (11) with the Repair Mast Cover (81)2pcs.

6 ASSEMBLY STEP 6

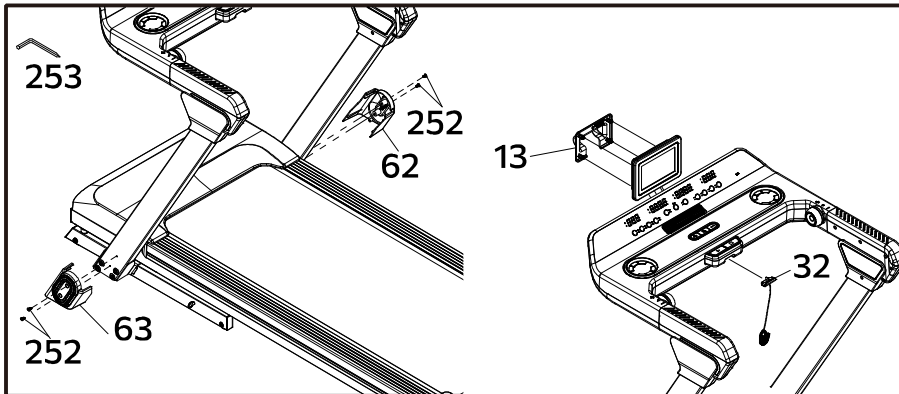


HARDWARE STEP 6

#252. M5 × P0.8 ×
12mm_Phillips Head
Screw (4 pcs)

1. Attach the Frame Base Cover (R) (**62**) and Frame Base Cover (L) (**63**), use: Allen Wrench Head Screw Wrench (**253**) Phillips Head Screw (**252**) 4pcs.
2. Fit the Rotate Axle Mast Cover Assembly (**13**) onto the Console Assembly (**10**).
3. Insert the Safety Key (**32**) into the Console Outer Cover Assembly (**11**).

7 ASSEMBLY STEP 7

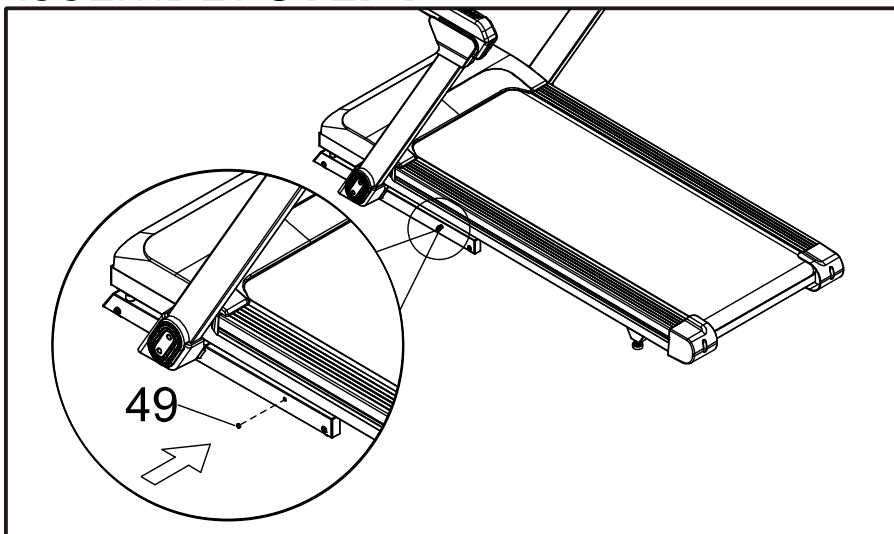

Note: After above assembly

1. insert the End Cap (**49**).

FOLDING INSTRUCTIONS

Do not attempt to move the unit unless it is in the folded and locked position. Be sure the power cord is secured to avoid possible damage. Use both handrails to maneuver the unit to the desired position.



■ TO FOLD THE TREADMILL

Make certain the treadmill is at minimum incline. Lift the treadmill running deck until it is secured by the locking telescoping tube assembly in center back of base.

■ TO UNFOLD THE TREADMILL

Apply slight forward pressure* on the treadmill running deck with one hand. Pull down on the unlocking lever and slowly lower the running deck to the floor. The deck will lower unassisted when it reaches about waist high.

- *At the rear roller area to relieve pressure on the locking system.

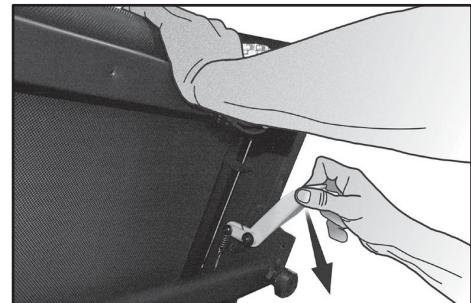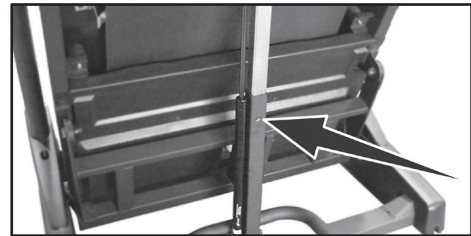

TRANSPORTATION INSTRUCTIONS

The treadmill is equipped with transport wheels that are engaged when the treadmill is folded.

After folding simply roll the treadmill away.

OPERATION OF YOUR TREADMILL

GETTING FAMILIAR WITH THE CONTROL PANEL

F83 CONSOLE



GETTING STARTED

F83 CONSOLES

Power the treadmill on by plugging it into an appropriate wall outlet, then turn on the power switch located at the front of the treadmill below the motor hood. Ensure that the **Safety Key** is installed, as the treadmill will not power on without it (*see assembly step 11 for reference*).



****ATTENTION****

SLEEP MODE Your console comes in "Sleep mode" with different features by choice:

ON The unit goes energy-saving state after 15 minutes of inactivity.

OFF The console will stay lit while the power is on.

RETAIL The console will run the demo video after 3 minutes of inactivity.

On LED displays, Hold the Stop and Display keys for 5 seconds to switch between ON and OFF.

On LCD displays, press and hold the Stop, Enter, and Display keys for 5 seconds to switch between ON and OFF.



On TFT displays, click "Sleep Mode" under Settings to switch among three features.

TOUCHSCREEN OPERATION

Use the touchscreen console to select from a variety of video classes, preset workout programs, and fitness tests; to enjoy media content while on the go; and to take part in virtual fitness events.

Getting Started

Launched for the first time, the console will prompt you to either enter as a guest, or create a new profile. It is recommended to set up your own profile: it allows your machine to remember your physical parameters, favorite programs and templates; you will have your own custom program with an adjustable intensity pattern, and your workout records can be synchronized with the SOLE+ mobile app. Tap **+** to create a new profile. A maximum of 9 profiles can be created. Each profile can be protected with a passcode.

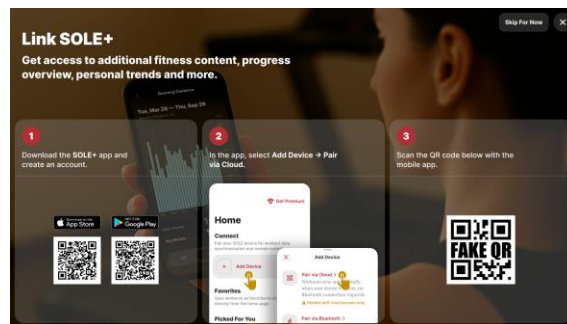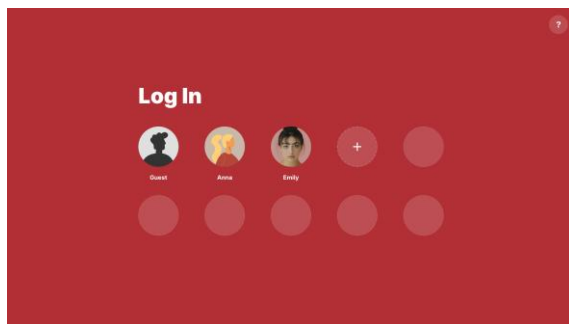


To link a SOLE+ account, scan the QR code on the console screen to download the mobile app first. Once the app is installed and the registration is complete, open the QR code scanning camera in your SOLE+ app, and scan the second QR code to link your local profile with the SOLE+ account. Please keep in mind that your console profile cannot be linked to multiple SOLE+ accounts at the same time. If you skip this step, you can access it again later in Profile settings.

Home

The **Home** screen displays an overview of your activity, and offers shortcuts to an immediate start, a manually controlled timed workout, your favorite programs and video classes, and club events you currently take part in or might be interested to join.

If in the Guest mode, you can set your age and weight here; it will help the machine calculate your workout summary more accurately.

The blocks displayed on this page are customizable. Press "Edit Home" to configure a layout that suits your preferences. You can enable or disable optional blocks and change their order.


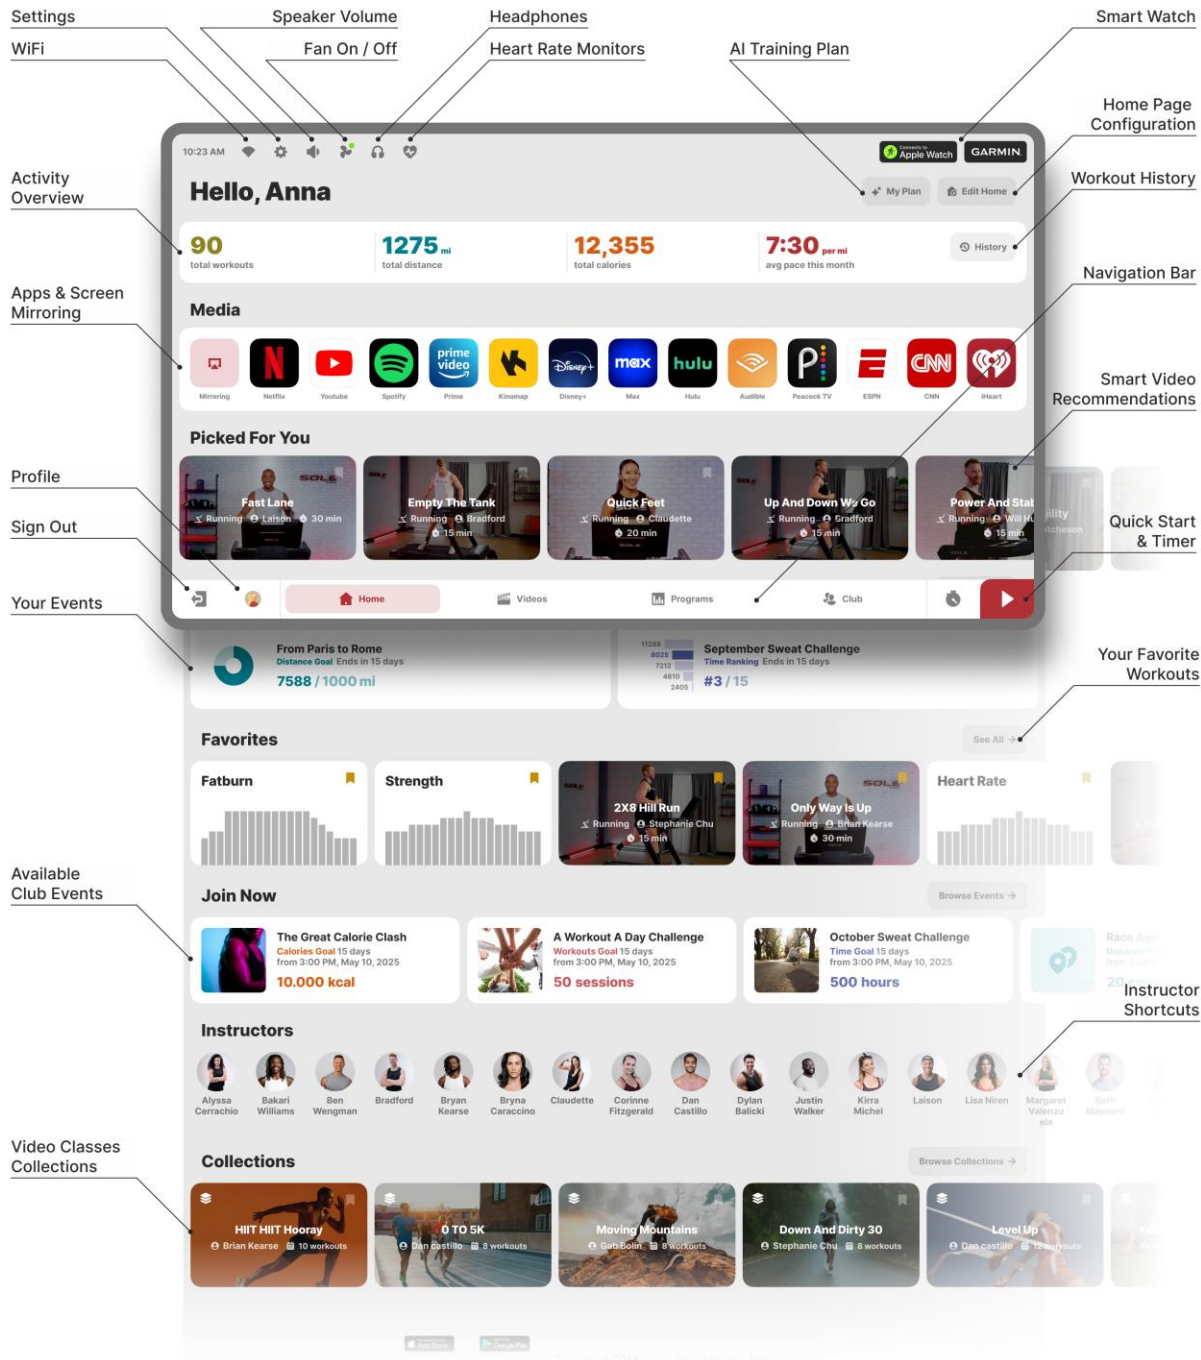


Videos

Access video classes by selecting the “Videos” tab of the bottom navigation bar.

Video classes are pre-recorded manually controlled workouts of fixed duration. Choose from hundreds of videos of 7 activity types, including Running, Yoga, Stretching, Boxing, Sculpt, Meditation and Full Sweat. For easier search, filter classes by instructor, duration, difficulty level, music genre, etc.



The additional tab menu on the top of the page features Collections. These are sequences of video classes, that follow a certain theme.

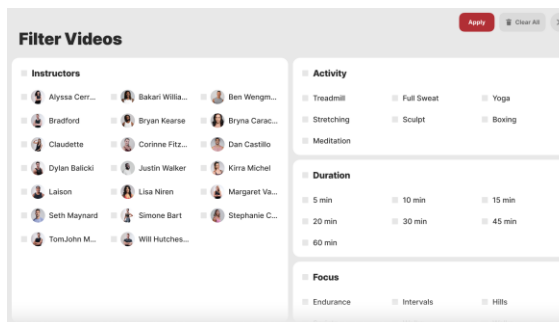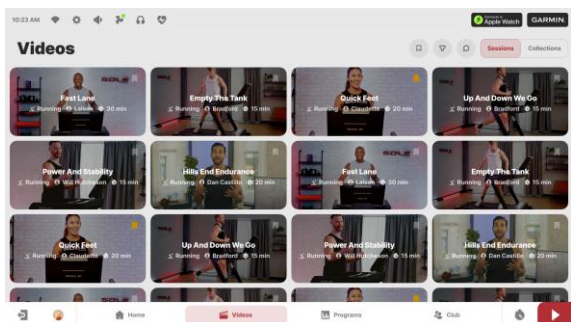

Programs

Access preset programs by selecting the “Programs” tab of the bottom navigation bar.

Tap on any of the program cards to open a Program Setup page, where you can learn more about the program and set properties of your workout. To adjust workout parameters, you can drag the ruler, tap on the **+** and **-** buttons, or tap on the number to open a numpad and input the value directly.

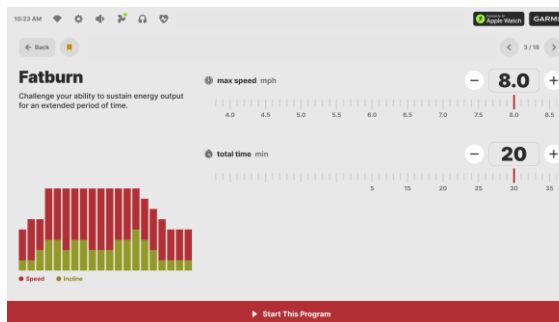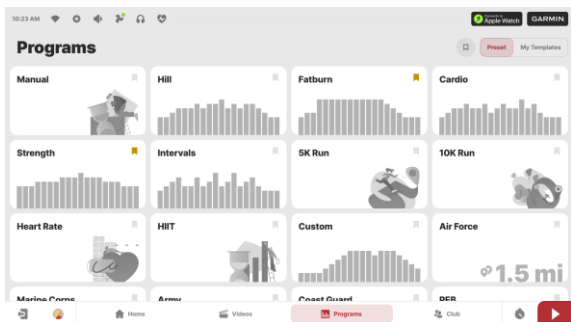

Manual program is a timed workout with speed and incline controlled manually at any time during the run.

Hill, Fatburn, Cardio, Strength and **Interval** follow preset speed and incline changing patterns. The Total Time and Max Speed settings define the duration and overall intensity of your workout.


The speed and incline levels for each segment of the programs are shown in the chart below. Speed values represent a percentage of the max speed that was set before start. For instance, if the max speed was set to 10.0 mph, and the value in the chart indicates 20, it means that this segment's speed will be 2.0 mph. If the value in the chart indicates 100, this segment's speed will be equal to the max speed you have set before the workout. Incline values are absolute.

Prog	SEG	Warm up	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	Cool down				
HILL	Speed	40	40	50	66	66	66	66	66	88	88	88	100	100	100	100	100	88	88	88	100	88	66	66	50	40	40
	Incline	0	0	0	0	0	4	8	8	0	7	7	0	0	7	8	9	0	0	0	5	0	0	0	0	0	0
FAT BURN	Speed	40	40	50	75	75	88	88	100	100	100	100	100	100	100	100	100	100	88	88	75	75	50	40	40		
	Incline	0	0	0	0	0	4	6	0	0	0	6	6	0	0	6	0	0	0	0	0	0	0	0	0	0	
CARDIO	Speed	40	40	50	66	66	66	75	75	88	88	75	75	88	66	88	75	100	100	88	75	75	66	66	50	40	40
	Incline	0	0	0	0	0	4	4	4	0	4	4	0	0	3	3	3	0	0	3	0	0	0	0	0	0	
STRENGTH	Speed	40	40	50	66	66	66	75	75	75	75	88	88	100	100	100	88	88	88	100	88	75	66	66	50	40	40
	Incline	0	0	0	0	0	4	6	8	10	10	0	0	0	8	8	10	0	0	6	8	0	0	0	0	0	
INTERVALS	Speed	40	40	50	75	75	100	50	100	50	100	50	100	50	100	50	100	50	100	50	100	50	100	100	50	40	40
	Incline	0	0	0	0	0	4	0	4	0	4	0	4	0	4	0	4	0	4	0	4	0	0	0	0	0	

HIIT is a customizable interval program where you can manually choose the duration and speed of the sprint and rest intervals, as well as the total number of intervals.



5K Run, 10K Run programs automatically set a target distance for your workout (5 km and 10 km, respectively). On the program setup page, the console will show the estimated total time for this run based on the selected target speed. Program ends when the target distance is reached.

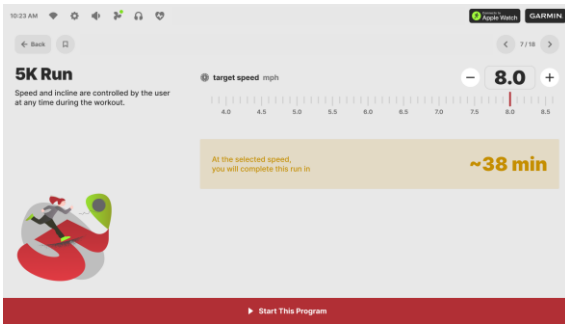



Heart Rate program uses incline to control your heart rate. The incline gradually increases until you reach your target heart rate, then adjusts automatically to keep you within 5 bpm of your goal. A heart rate monitor is required for this program.

On the program setup page, you can either set the target bpm directly or select 60% or 80% of your age-predicted maximum heart rate, allowing the machine to calculate your target automatically. Choosing the second option, make sure you have let the machine know how old you are, otherwise the calculations will be based on the default values. The program is finished when the time is up, or if your heart rate is 20% higher than the target.




Custom is a program with fully customizable speed and incline patterns. On the program setup page, press “Add Pattern” to enter edit mode. Connect dots to map your load throughout the program, from easiest on the bottom to hardest on the top. Each segment’s duration depends on the selected total time – you can set it right before start.

Speed values are relative, and maximum can be changed before each workout; all the segments will be adjusted proportionally. Incline values are absolute and can be set directly. Incline pattern is optional.

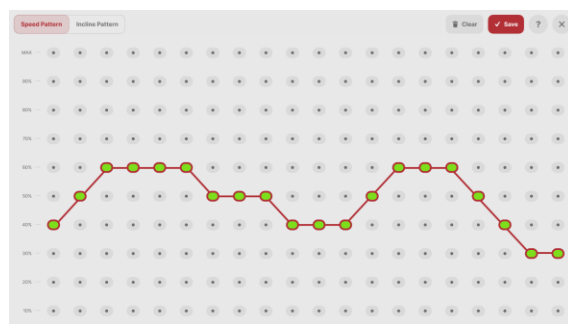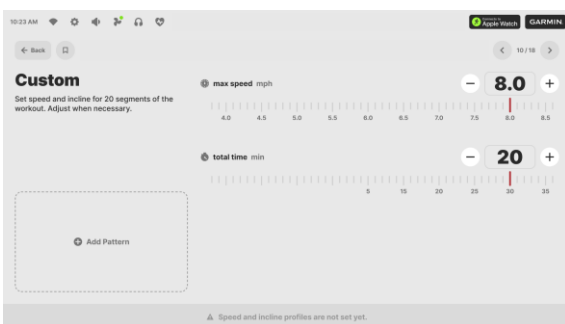

Fitness tests are also available on the Programs page. Tap on the test card to open the test setup page. Please make sure that the physical parameters displayed on this page are correct: this data may affect the course of the test and its results; if the data is not accurate, press “Edit Parameters” to adjust the numbers.

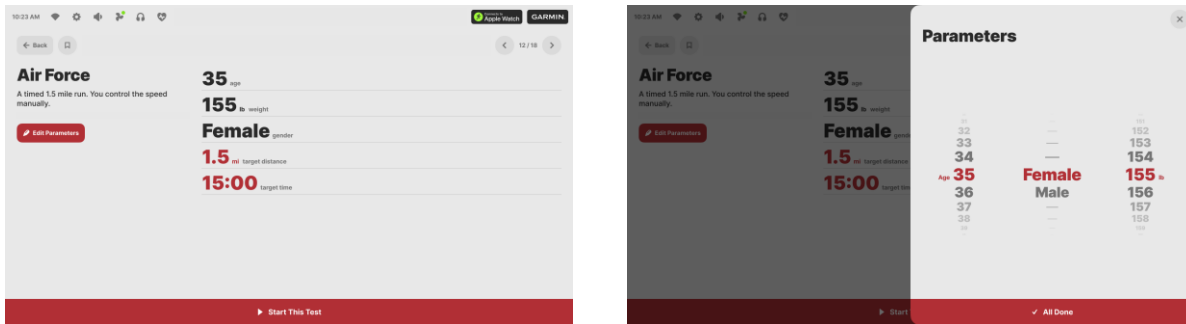


Before the test,

- make sure you are in good health; check with your physician before performing any exercise if you are over the age of 35 or have any pre-existing health conditions;
- make sure you have warmed up and stretched before taking the test;
- do not take in caffeine before the test.

Gerkin Protocol is a sub maximal VO₂ (volume of oxygen) test, that increases speed and incline alternately until you reach 85% of your max heart rate (a heart rate monitor is required for this test). The time it takes for you to reach 85% determines the test score (VO₂ Max). The test starts with a 3-minute warm-up at a lower speed.

Air Force, Army, Navy, Coast Guard, PEB and **Marine Corps** are US military tests that measure the time required for you to cover a certain distance. The speed is controlled manually.



The additional tab menu on the top of the page features **Templates**. Templates are preset programs with a preserved set of parameters. Programs can be saved as templates upon completion, or you can create one from scratch in the Templates tab: tap on the “New Template” button, choose your base program, then save it with adjusted properties. A maximum of 12 template programs can be stored. To remove the unwanted templates, press “Edit” in the Templates tab.

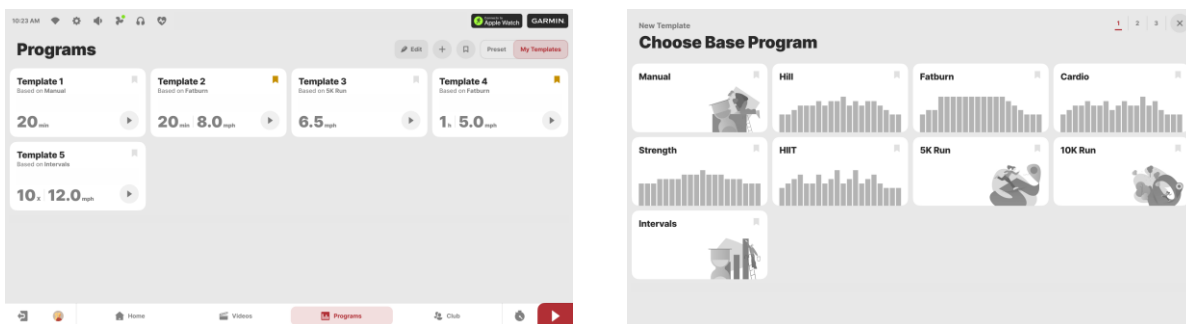

Once you have decided on the program, press the “Start This Program” button on the screen, or the physical “START” key on the machine to begin your workout.



Favorites

Any class, collection or program can be labeled as a **Favorite**. Up to 12 favorite programs will appear on the Home page for easier access. To “like” a program, open the program setup page and tap on the “ribbon” icon in the upper left corner of the screen. Manage previously labeled programs on the Favorites page, that can be accessed from the Home page or the user Profile page. To remove the label, un-tap the “ribbon” icon.

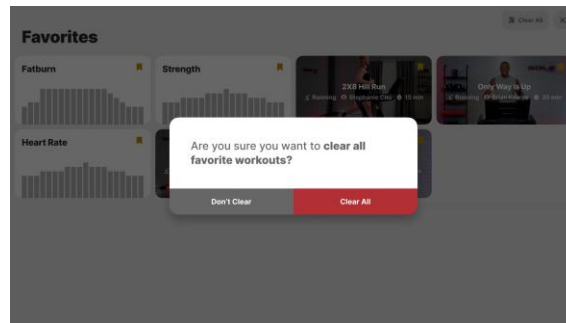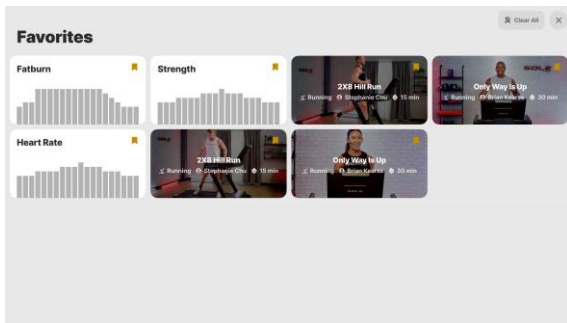

History



To see your latest workout records, press “History” on the Home page. Up to 10 records can be stored locally on the console, but you can access your full workout history if you link your profile to the SOLE+ mobile app. Tap on the record preview to see the full summary.

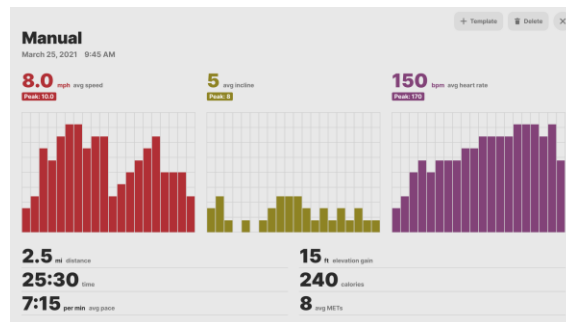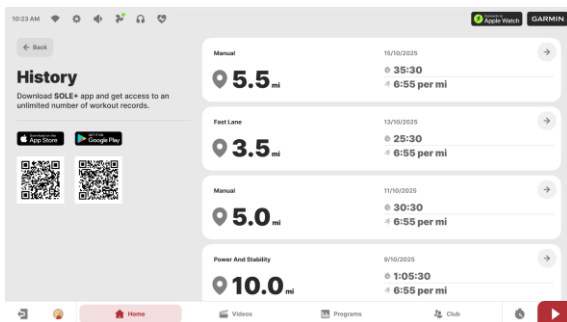

Workout Mode

Once the workout has started, after the short countdown the console will appear in its workout mode. Warm-up and cool down phases may be skipped by pressing “Skip”.



During the workout, switch between **Stats (Focus)**, **Charts** and **Track** views to check on your workout progress; go to the **Media** section to enjoy your favorite media content; or open **Garmin** to observe your Garmin smart watch real-time data. In the Focus view, you can select parameters you would like to display by tapping on any of the number blocks.

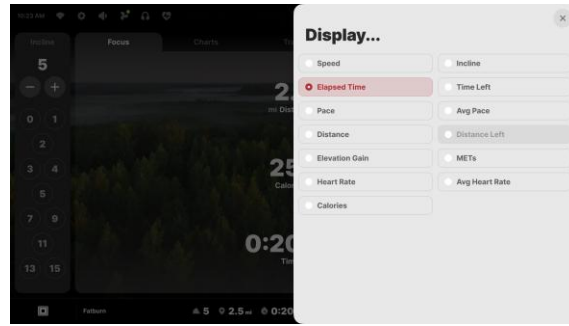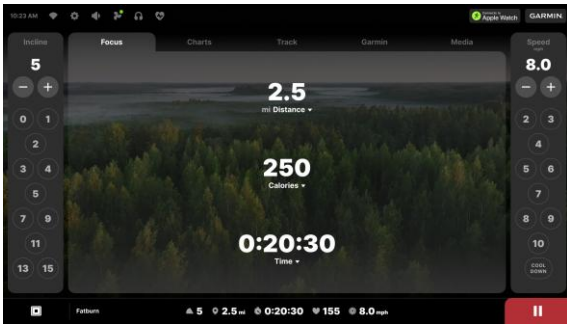

Use side control panels or physical keys to adjust speed and incline. Stop anytime by pressing the physical “STOP” key or tapping on the red pause button in the bottom right corner of the screen. After 5 minutes of inactivity in the Pause mode, the workout will end automatically.

Media



On the Home page, choose from a variety of pre-installed **Apps**, or use the **Mirroring** function to cast the content from your smartphone directly to the console screen.

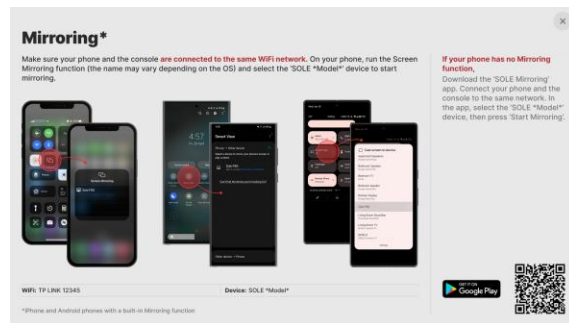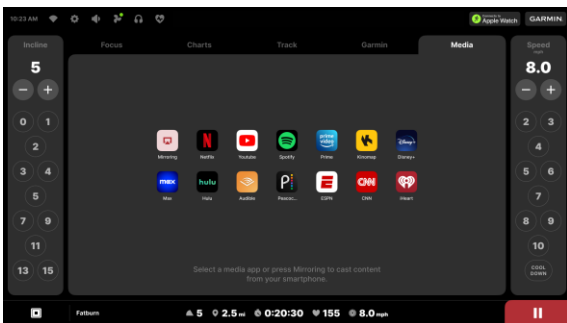

Once the content is on, use the bottom panel for navigation and view settings.

Switch between the three view layouts, depending on the amount of information you prefer to see while working out:



- full interface (status bar, control panels, real-time stats);
- partial interface (status bar, real-time stats);
- minimal interface (full-screen content with all the panels hidden).

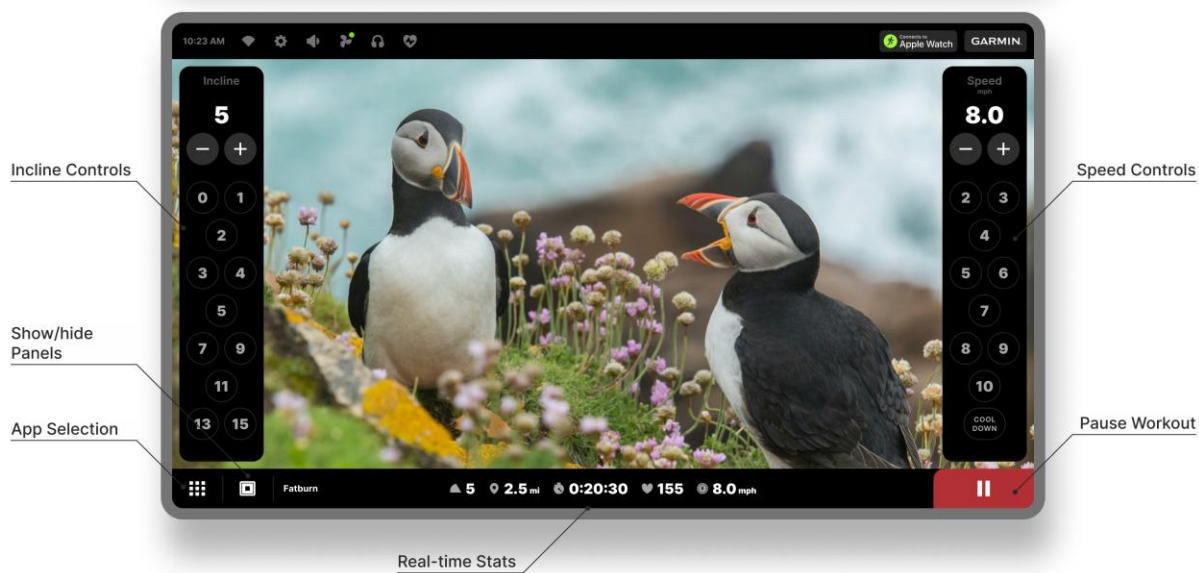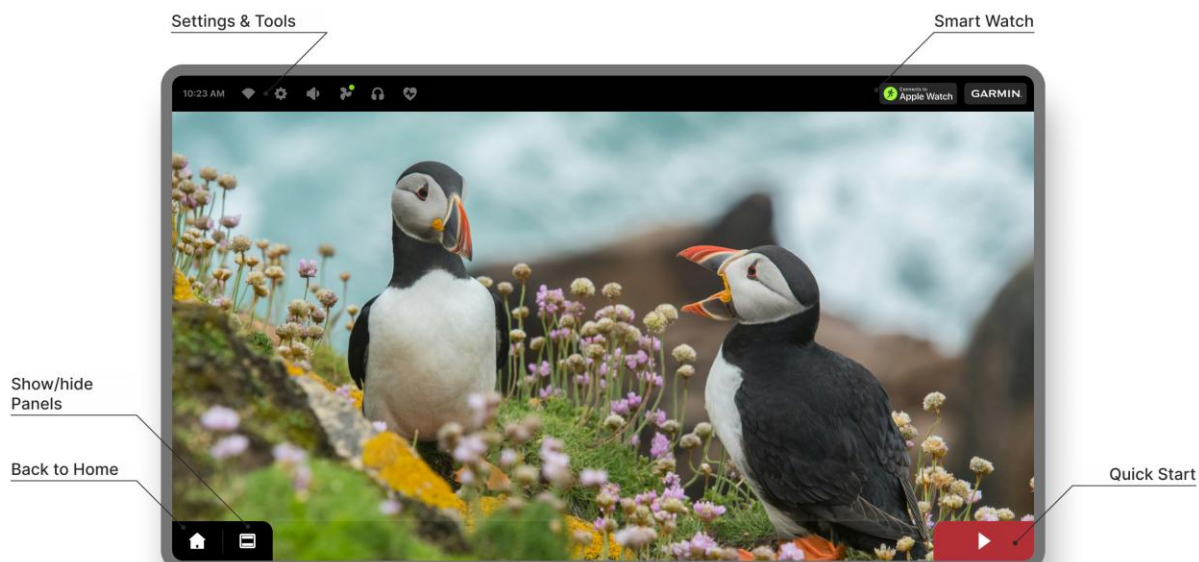

Follow the same logic while watching video classes. You can navigate through the video by sliding on the progress bar, or skip 10-second intervals by pressing ⏮ and ⏭ icons. The “Pause” button stops the treadmill, pauses both your workout and the video at the same time.

Club

Access community challenges by selecting the “Club” tab in the bottom navigation bar. Here, you can find events, created by other members of the SOLE community. To view all available events, your profile must be linked to your SOLE+ account.

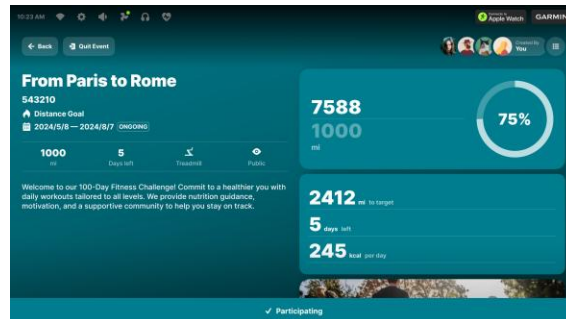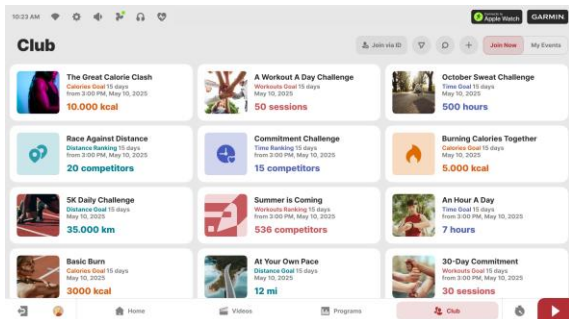

Shared goals are challenges with a predefined target score, which must be achieved within a limited time period in order to complete the challenge.

Rankings are competitions in which users try to earn the highest score possible within a limited time period in order to defeat as many competitors as possible.

The score can be represented by one of the following focus parameters: calories, distance, active time and workout count.

To search for particular events more easily, press the “filter” icon in the upper menu and filter items by format, duration and focus parameter.

Join private events by using the “Join via ID” function. Enter the event ID that was shared with you by the creator of the event, and you will automatically become a participant.

Create your own challenges by pressing the **+** icon in the upper menu. Here, you can choose event format, focus parameter, set dates, event name and optional description for your challenge. Your event can be private or public depending on your preferences.

By joining your first event, you agree to share your username, profile image, and workout data (such as workout dates, distances, active time, and calories) with other participants.



This treadmill is equipped with not only TFT displays but also LED displays. The details are as follows:

1. During operation, the LED displays only synchronously show the motion data of the TFT displays. The four windows of the LED displays respectively display the motion data of INCLINE, CALORIE, PACE, and SPEED. By pressing the DISPLAY/ENTER key, the display of LAPS, DISTANCE, TIME, and PULSE motion data can be switched.
2. Press the Start key to begin belt movement. Use the speed knob button to adjust to the desired speed. You may also use the speed keys 3, 6, 9, 12 to adjust the speed.
3. To slow down the tread belt, use the speed knob to adjust it to the desired speed. You may also press the speed adjust keys, 3 through 12.
4. Incline may be adjusted anytime after belt movement. Use the Incline knob to adjust the keys to achieve the effect you want. You may also choose a more rapid increase / decrease by selecting desired key 0, 5, 10, 15, on the left hand side of console (incline).
5. When the treadmill is running, the pause feature may be utilized by pressing the red Stop key once. This will slowly decelerate the tread-belt to a stop. The incline will go to zero percent. The Time, Distance and Calorie readings will hold while the unit is in the pause mode. After 5 minutes the display will reset and return to the start up screen. To resume your exercise, while in Pause mode, press the Start key. The speed and incline will return to their previous settings.
6. After the treadmill is powered on, press the FAN key to start the fan, and then press it again to turn it off.
7. When the TFT displays are damaged and cannot be used, at this point you can unplug the connection cable of the TFT displays and use the LED displays for operation. At this time, the LED displays operate independently and can be started directly by pressing the START key or select the program for movement by pressing the PROGRAM key. You can just press the Start key to begin the program using the preset program values for age, weight and other program specific information.
8. Heart rate programming, caution! Heart Rate programs are intended for wireless Bluetooth wearables only. You must receive a strong/steady value in the Heart Rate Window.

New SOLE + App to be used in conjunction with select Apple & Android devices!


In order to help you achieve your exercise goals, Sole has added an exciting new feature to this product. Your new exercise machine comes equipped with a Bluetooth® transceiver that will allow it to interact with compatible iOS and Android smartphones or tablet computers via the SOLE+ App.

Just download the free SOLE+ App from the Apple Store or Google Play, and follow the instructions in the App to sync with your exercise machine.

The Sole+ App also allows you to sync your workout data with one of many fitness cloud sites we support: Apple Health, Google Health Connect, Strava, or MapMyFitness, with more to come.

Syncing the App with your exercise machine:

After downloading the App, make sure Bluetooth® is enabled on your device, then tap the icon at the top right corner to search for Sole equipment.

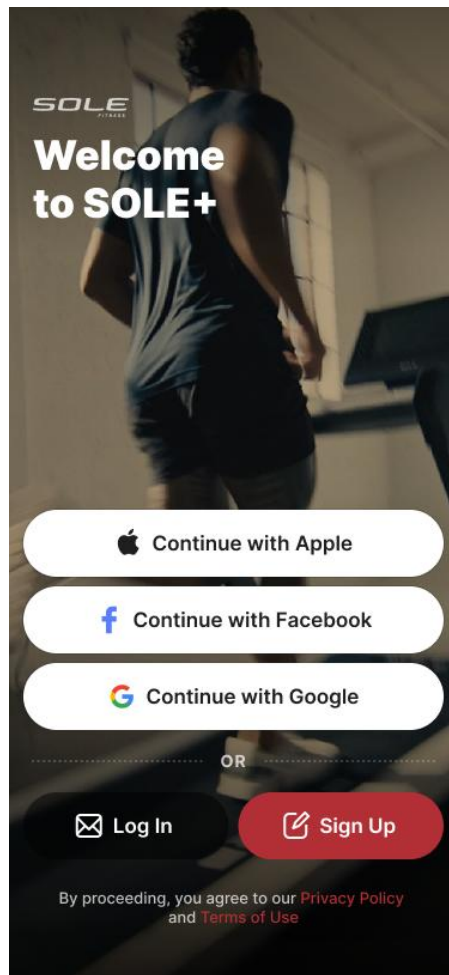

After the equipment is detected, tap Connect. When the App and equipment are synced, Bluetooth® icon on the equipment's console will light up. You may now start using your new Sole product!

The exercise equipment can also play music wirelessly via Bluetooth. Turn on your mobile phone or tablet's Bluetooth function. Search for the name "BT-Speaker" in your device's Bluetooth menu. Tap to connect. Now your device can transmit music to the exercise equipment.

Charge Portable Devices with USB port

USB Port Charging function:

Charge your personal device during your workout using the fitness equipment's on-console type-c USB port.

To charge your mobile electronics make sure the fitness equipment power is on.

Step 1: Connect your type-c USB charging cable to the USB Power Port and to your device.

Step 2: Check to make sure your device icon indicates it is charging.



NOTE :

- USB charging cable is not included, make sure compatible USB charging cable is being used.
- Your device "charging" icon may or may not indicate it is charging. Depending on the amount of current your particular device requires for charging the icon may not be on but your device is still charging, but possibly at a lower charge rate.
- The USB port on the console is capable of powering USB devices. It provides up to 5Vdc/1.5 amp of power. You will not be able to save your workout data to a USB via this port; it is used for charging purposes only.

HEART RATE PROGRAMS

Before we get started, a word about Heart Rate:

The old motto, “no pain, no gain”, is a myth that has been overpowered by the benefits of exercising comfortably. A great deal of this success has been promoted by the use of heart rate monitors. With the proper use of a heart rate monitor, many people find that their usual choice of exercise intensity was either too high or too low and exercise is much more enjoyable by maintaining their heart rate in the desired benefit range.

To determine the benefit range in which you wish to train, you must first determine your Maximum Heart Rate. This can be accomplished by using the following formula: 220 minus your age. This will give you the Maximum Heart Rate (MHR) for someone of your age. To determine the effective heart rate range for specific goals you simply calculate a percentage your MHR. Your Heart rate training zone is 50% to 90% of your maximum heart rate. 60% of your MHR is the zone that burns fat while 80% is for strengthening the cardio vascular system. This 60% to 80% is the zone to stay in for maximum benefit.


For someone who is 40 years old their target heart rate zone is calculated:

$$\begin{aligned} 220 - 40 &= 180 \text{ (maximum heart rate)} \\ 180 \times 0.6 &= 108 \text{ beats per minute} \\ &\text{(60\% of maximum)} \\ 180 \times 0.8 &= 144 \text{ beats per minute} \\ &\text{(80\% of maximum)} \end{aligned}$$

So for a 40 year old the training zone would be 108 to 144 beats per minute.

If you enter your age during programming the console will perform this calculation automatically. Entering your age is used for the Heart Rate programs. After calculating your MHR you can decide upon which goal you would like to pursue.

The two most popular reasons for, or goals, of exercise are cardiovascular fitness (training for the heart and lungs) and weight control. The black columns on the chart above represent the MHR for a person whose age is listed at the bottom of each column. The training heart rate, for either cardiovascular fitness or weight loss, is represented by two different lines that cut diagonally through the chart. A definition of the lines' goal is in the bottom left-hand corner of the chart. If your goal is cardiovascular fitness or if it is weight loss, it can be achieved by training at 80% or 60%, respectively, of your MHR on a schedule approved by your physician. Consult your physician before participating in any exercise program.

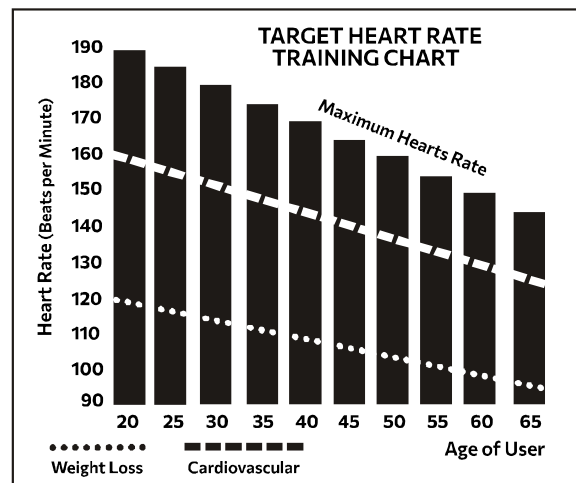

RATE OF PERCEIVED EXERTION

Heart rate is important but listening to your body also has a lot of advantages. There are more variables involved in how hard you should workout than just heart rate. Your stress level, physical health, emotional health, temperature, humidity, the time of day, the last time you ate and what you ate, all contribute to the intensity at which you should workout. If you listen to your body, it will tell you all of these things.

The rate of perceived exertion (RPE), also know as the Borg scale, was developed by Swedish physiologist G.A.V. Borg. This scale rates exercise intensity from 6 to 20 depending upon how you feel or the perception of your effort.

The scale is as follows:

Rating Perception of

Effort

- 6 Minimal
- 7 Very,very light
- 8 Very,very light +
- 9 Very light
- 10 Very light +
- 11 Fairly light
- 12 Comfortable
- 13 Somewhat hard
- 14 Somewhat hard +
- 15 Hard
- 16 Hard +
- 17 Very hard
- 18 Very hard +
- 19 Very,very hard
- 20 Maximal

You can get an approximate heart rate level for each rating by simply adding a zero to each rating. For example a rating of 12 will result in an approximate heart rate of 120 beats per minute. Your RPE will vary depending up the factors discussed earlier. That is the major benefit of this type of training. If your body is strong and rested, you will feel strong and your pace will feel easier. When your body is in this condition, you are able to train harder and the RPE will support this. If you are feeling tired and sluggish, it is because your body needs a break. In this condition, your pace will feel harder. Again, this will show up in your RPE and you will train at the proper level for that day.

USING WIRELESS WEARABLE DEVICES

The exercise equipment's Bluetooth device can also be connected to the Bluetooth wearables. The Bluetooth wearables can receive signals even when the App is already in use. You can wear the Bluetooth wearables first then commence connection. While in connection, the console will show heart rate value via Bluetooth.

With the NFC reader the users wearing a compatible smart watch can close the watch to the NFC reader where the ((NFC)) shown on the panel. The fitness equipment will automatically connect the watch. Once starting workout the heart rate value of the watch can be displayed on the panel of the fitness equipment and the workout data of the fitness equipment can be display on the watch as well.

GENERAL MAINTENANCE

BELT & DECK

Your treadmill uses a very high-efficient low-friction deck. Performance is maximized when the deck is kept as clean as possible. Use a soft, damp cloth, or paper towel, wipe the edge of the belt and the area between the belt edge and the frame. Also reach as far as practical directly under the belt edge. This should be done once a month to extend belt and bed life. A mild soap and water solution along with a nylon scrub brush will clean the top of the textured belt. ***Allow to dry before using.***

BELT DUST

This occurs during normal break-in or until the belt stabilizes. Sometimes the black dust from the belt will appear on the floor behind the treadmill, this is normal.

GENERAL CLEANING (Use the chart on Pg. 5 to record your maintenance)

Dirt, dust, and hair can block air inlets and accumulate on the running belt. Please vacuum underneath your treadmill on a monthly basis to prevent excess build-up of dirt that can get sucked up and get into the inner workings under the motor cover. Every other month, you should remove the motor cover and carefully vacuum out dirt and hair that may accumulate. **UNPLUG THE POWER CORD BEFORE THIS TASK.**


BELT ADJUSTMENTS

Tread-belt Tension Adjustment - Belt tension is not critical for most users. It is very important though for joggers and runners in order to provide a smooth, steady running surface. Adjustment must be made from the rear roller with the M6 L Allen wrench (**262**) provided in the parts package. The adjustment bolts are located at the end of the step rails as shown in the diagram below. ***Note: Adjustment is through small hole in end cap.***

Tighten the rear roller only enough to prevent slippage at the front roller. Turn the tread-belt tension adjusting bolts 1/4 turn each and inspect for proper tension by walking on the belt and making sure it is not slipping or hesitating with each step. When an adjustment is made to the belt tension, you must be sure to turn the bolts on both sides evenly or the belt could start tracking to one side instead of running in the middle of the deck.

DO NOT OVERTIGHTEN – Over tightening will cause belt damage and premature bearing failure. If you tighten the belt a lot and it still slips, the problem could actually be the drive belt

- located under the motor cover - that connects the motor to the front roller. If that belt is loose it feels similar to the walking belt being loose. Tightening the motor belt should be done by a trained service person.

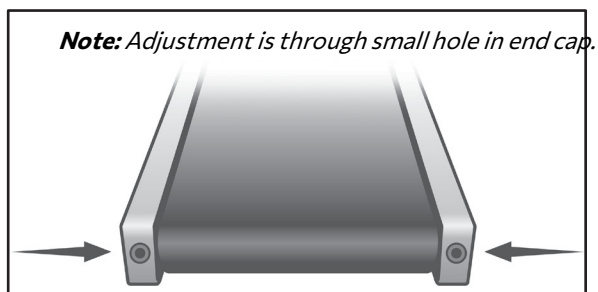


TREAD-BELT TRACKING ADJUSTMENT

The treadmill is designed so that the tread-belt remains reasonably centered while in use. It is normal for some belts to drift near one side while in use, depending on a user's gait and if they favor one leg. But if during use the belt continues to move toward one side, adjustments are necessary.

SETTING TREAD-BELT TRACKING

A 6 mm Allen wrench (**262**) is provided for this adjustment. Make tracking adjustments on the left side bolt. Set belt speed at 3 mph. Be aware that a small adjustment can make a dramatic difference which may not be apparent right away. If the belt is **too close to the left side**, then turn the bolt only a 1/4 turn to the right (clockwise) and wait a few minutes for the belt to adjust itself.

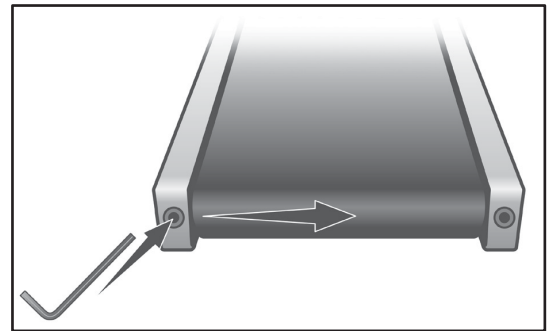

Continue to make 1/4 turns until the belt stabilizes in the center of the running deck. If the belt is **too close to the right side**, turn the bolt counter-clockwise. The belt may require periodic tracking adjustment depending on use and walking/running characteristics. Some users may affect tracking differently. Expect to make adjustments as required to center the tread-belt. Adjustments will become less of a maintenance concern as the belt is used. Proper belt tracking is an owner responsibility common with all treadmills.

ATTENTION:

DAMAGE TO THE RUNNING BELT RESULTING FROM IMPROPER TRACKING / TENSION ADJUSTMENTS IS NOT COVERED UNDER THE SOLE WARRANTY.

TREADMILL BELT

The walking belt on your new Sole treadmill is made of the highest quality materials designed to last even under punishing conditions. When a treadmill belt is brand new, and has been in the package for a few months before use, a common occurrence can happen; the area of the belt that wraps around the rollers will take on the shape of the roller. Upon starting the treadmill this shape in the belt causes a thumping sound each time the belt moves past the rollers. Once the treadmill has been used for a few workouts, the belt wears in and the thumping sound goes away. This noise is normal on new higher end belts so there is no need to contact service; the new belt just requires a wear in period. Thank you for choosing Sole and enjoy your new treadmill.

PREVENTATIVE MAINTENANCE CHART

Vacuum Under Motor Cover & Check Wiring (Every Other Month)	Clean & Inspect Deck for Lubrication (Every Other Month)	Lubricate Deck (Every 90 hours or sooner if dry)	Inspect Belt Tracking (Monthly) Adjust if necessary	Date

BELT/DECK LUBRICATION

First, you want to clean between the belt and deck to remove any debris that may be trapped.

Use a clean, non-fraying rag, t-shirt, or light towel. Halfway between the end of the treadmill and motor cover, shove the garment under the belt until you can grasp it on both sides of the belt. Drag the garment the length of the entire belt 1-2 times. Remove the garment.

Do not lubricate with anything other than Sole Fitness approved lubricant. 100% Food grade Silicone lubricant for treadmills. (DO NOT USE SILICONE CAULKING FOR BATHROOM AND KITCHEN PROJECTS OR A LUBRICANT THAT HAS A SPRAY/FOAM BASE)

Your treadmill comes with one tube of “Lube” and extra tubes can be ordered directly from Sole Fitness or your authorized Sole Fitness dealer. You may also use a Lube-n-Walk kit that can be purchased through both aforementioned sellers. You need to use 2-3 ounces of lubrication each application.

Keeping the deck lubricated at the recommended intervals ensures the longest life possible for your treadmill. If the lubricant dries out, the friction between the belt and deck rises and places undue stress on the drive motor, drive belt and electronic motor control board, which could result in catastrophic failure of these expensive components. Failure to lubricate the deck at regular intervals may void the warranty.

The belt & deck come pre-lubricated and subsequent lubrication should be performed every 90 hours of use, or every 90 days, regardless of usage as it can dry out, or if you notice that the deck is dry. It is recommended that you reach between the belt and deck to verify there is lubrication present, every other month. If you check and there isn't any lubrication present, follow the procedure below even though the “Lube” indicator isn't lit on the console. Otherwise, lubricate when the console's lubrication reminder lights after 90 hours of use. Use the following procedure to apply the silicone lubricant:

1. Turn the power switch off and unplug the power cord from the wall outlet.
2. Measure 18” from the edge of the motor cover; kneel down and reach under the belt approximately 4- 6” from one edge. Squirt a line of lubricant about 1/8” wide x 15” long in an “S” pattern perpendicular to the motor cover.
3. Repeat the process on the opposite side.
4. Plug the electrical cord back into the outlet and turn the power switch on.
5. Walk on the belt at a moderate speed for five minutes to evenly distribute the silicone lube.

SERVICE CHECKLIST - DIAGNOSIS GUIDE

Before contacting your dealer for aid, please review the following information. It may save you both time and expense. This list includes common problems that may not be covered under the treadmill's warranty.

PROBLEM	SOLUTION/CAUSE
Display does not light	<ol style="list-style-type: none"> 1. Tether cord not in position. 2. Circuit breaker on front grill tripped. Push circuit breaker in until it locks. 3. Plug is disconnected. Make sure plug is firmly pushed into AC household wall outlet. 4. Household circuit breaker may be tripped. 5. Treadmill defect. Contact your SOLE dealer.
Tread-belt does not stay centered Treadmill belt hesitates when walked/run on	<p>The user may be walking while favoring or putting more weight on either the left or right foot. If this walking pattern is natural, track the belt slightly off-center to the side opposite from the belt movement. See General Maintenance section on Tread-belt Tension. Adjust as necessary.</p>
Motor is not responsive after pressing Start	<p>Check the problem handling based on the error code reported.</p>
Treadmill will only achieve approximately 7 mph but shows higher speed on display	<p>This indicates motor should be receiving power to operate. Low AC voltage to treadmill. Do not use an extension cord. If an extension cord is required it should be as short as possible and heavy duty 16 gauge minimum. Low household voltage. Contact an electrician or your SOLE dealer. A minimum of 120 volt AC current is required.</p>
Tread-belt stops quickly/suddenly when tether cord is pulled	<p>High belt/deck friction. See General Maintenance section on lubrication.</p>
Treadmill trips on board 15 amp circuit	<p>High belt/deck friction. See General Maintenance</p>
Computer shuts off when console is touched (on a cold day) while walking/running	<p>Treadmill may not be grounded. Static electricity is "crashing" the computer. Refer to Grounding Instructions on page 3.</p>
House circuit breaker trips, but not the treadmill circuit breaker	<p>Check that the treadmill is the only appliance in the circuit. See "Important Electrical Information" in the front of this manual for more details.</p>

ERROR MESSAGES FOR DIGITAL- CONTROL SYSTEM TREADMILLS

Before contacting us for aid, please review the following information. It may save you both time and expense. This list includes common problems that may not be covered under the treadmill's warranty.

Problem	Meaning	Solution/Cause
Console Showing LUBE	Reminder to check lubrication under walking deck	1. Check lubrication under walking belt. Reference belt deck lubrication procedure on page 28. 2. Power the treadmill three times to reset the lube message.
Console Showing E01	Over Current Protection Treadmill over loaded, controller protection is activated.	1. Exceeding the rated load leads to excessive current, the system self-protection shows the error code, and re-power recovery. 2. A certain part of the treadmill is stuck, resulting in the motor can not turn, the load is too heavy, the current is too large, the system reports an error, adjust the treadmill to restart the operation or increase the lubricating oil 3. Check whether there is a flowing sound or burning smell when the motor is running, and replace the motor 4. Replace the controller.
Console Showing E02	Hall mistake	1. Motor is not connected properly or not connected to the controller. 2. Replace the motor. 3. Replace the controller.
Console Showing E03	The hardware current is too large.	1. Exceeding the rated load leads to excessive current, the system self-protection shows the error code, and re-power recovery. 2. Check whether the connection between the power socket plug and the motor is loose. 3. Replace the controller.
Console Showing E04	Phase loss	1. Motor is not connected properly or not connected to the controller. 2. Replace the motor. 3. Replace the controller.
Console Showing E05	undervoltage	1. <i>Check whether the input power voltage is normal.</i> 2. Check whether the connector of the power socket is loose.
Console Showing E06	overvoltage	1. Check whether the input power voltage is normal.
Console Showing E3	Incline adjustment error	1. Check whether the Incline cable is properly connected. 2. Connect the Incline cable and power it on. 3. Connect the Incline wire and re-calibrate it.
Console Showing E22	Error in communication between the LED electronic watch and the control board	1. Check whether the cable between the electronic watch and the LED controller is loose. 2. Check whether the controller is damaged. 3. Check whether the LED electronic watch is damaged. 4. After 2 minutes of power failure, power it on again.
Console Showing E23	TFT electronic watch has communication error with LED electronic watch	1. Check whether the cable between the LED electronic watch and the TFT electronic watch is loose.. 2. Check LED electronic watch and the TFT electronic watch is damaged. 3. After 2 minutes of power failure, power it on again.
Console Showing E31	overtemperature	1. Wait until the temperature of the machine is normal before running
Console ERROR	TFT electronic watch communication failure	1. Check whether the TFT electronic watch is damaged. 2. After 2 minutes of power failure, power it on again.

MANUFACTURER'S LIMITED WARRANTY

TREADMILL WARRANTY

Effective February 1, 2026

SOLE warrants all its treadmills' parts, for a period of time listed below, from the date of retail sale, as determined by sale receipt, or in the absence of a receipt eighteen (18) months from the original factory shipping date. SOLE's responsibilities include providing new or remanufactured parts, at SOLE's option, and technical support to our independent dealers and servicing organizations. In the absence of a dealer or service organization, these warranties will be administered by SOLE directly to a consumer. The warranty period applies to the following components:

Frame	Lifetime
Parts	3 years
Labor	1 year
Cosmetic Items*	90 Days

*Cosmetic items including, but not limited to the following: grips, console overlays, and labels/decals.

NORMAL RESPONSIBILITIES OF THE CONSUMER

This warranty applies only to products in ordinary household use, and the consumer is responsible for the items listed below:

1. The warranty registration card must be completed and returned to the address listed on the card within 10 days of the original purchase to validate the manufacturer's limited warranty or, if outside of the 10 day period, the warranty can be registered if you have proof of purchase (i.e. receipt, bank statement, credit card statement, or email order confirmation).
2. Proper use of the treadmill in accordance with the instructions provided in this manual, including general maintenance (i.e. belt tracking, belt tension, vacuuming under motor cover, and lubrication. See all components under General Maintenance section).
3. Proper installation in accordance with instructions provided with the treadmill and with all local electric codes.
4. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in house wiring.
5. Expenses for making the treadmill accessible for servicing, including any item that was not part of the treadmill at the time it was shipped from the factory.
6. Damages to the treadmill finish during shipping, installation or following installation.
7. Routine maintenance of this unit as specified in this manual. (See All Components under General Maintenance).
8. Provide pictures or video of any issues via email as requested by the service technician. Assist with troubleshooting/diagnosing prior to a home visit.

EXCLUSIONS

This warranty does not cover the following:

1. CONSEQUENTIAL, COLLATERAL, OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN OR ANY IMPLIED WARRANTY.

Note: Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

2. Service call reimbursement to the consumer. Service call reimbursement to the dealer that does not involve malfunction or defects in workmanship or material, for units that are beyond the warranty period, for units that are beyond the service call reimbursement period, for treadmill not requiring component replacement, or treadmill not in ordinary household use.
3. Damages caused by services performed by persons other than authorized SOLE service companies; use of parts other than original SOLE parts; or external causes such as corrosion (RUST), discoloration of paint or plastic, alterations, modifications, abuse, misuse, accident, improper maintenance-(see general maintenance instructions section), including lack of consistent lubrication of the deck, inadequate power supply, natural disasters, or elemental damage (i.e. power surges, lightning storms, water damage, or fire damage.)
4. Products with original serial numbers that have been removed or altered.
5. Products that have been: sold, transferred, bartered, or given to a third party. (Warranties DO NOT transfer.)
6. Products that do not have a warranty registration card on file at SOLE. SOLE reserves the right to request proof of purchase if no warranty record exists for the product.
7. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.
8. Product use in any environment other than a residential setting.
9. Warranties outside of North America may vary. Sole USA warranty coverage is limited to the Continental United States. Sole USA does not sell or service equipment in Hawaii, Alaska, or outside of the United States. Please contact your local dealer for details regarding warranty availability in your region.
10. Warranty will be void if the unit is not in a climate-controlled, insulated environment. (Examples: Garage, outside, carport, etc)

SERVICE

Keep your bill of sale. Twelve (12) months from the date on the bill of sale or eighteen (18) months from the date of factory shipping as determined by the serial number establishes the labor warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. This written warranty gives you specific legal rights. You may also have other rights that vary from state to state. Service under this warranty must be obtained by following these steps, in order:

1. Contact your selling authorized SOLE dealer. OR
2. Submit all service requests including serial number, contact information and a brief description of the problem online at <http://www.soletreadmills.com/serviceparts.html>.
3. If there is a question as to where to obtain service, contact our service department at 866-780-7653.
4. If no local service is available, SOLE will repair or replace the parts, at SOLE's option, within the warranty period at no charge for parts. All transportation costs, both to our factory and upon return to the owner, are the responsibility of the owner. The owner is responsible for adequate packaging upon return to SOLE. SOLE is not responsible for damages that occur during shipping. Make all freight damage claims with the appropriate freight carrier. DO NOT SHIP ANY UNIT TO OUR FACTORY WITHOUT A RETURN AUTHORIZATION NUMBER. All units arriving without a return authorization number will be refused.

5. The service department assists in troubleshooting prior to sending a field technician. SOLE may request pictures and video via email of issues to help with diagnosing.

Before returning your Sole product to any retailer, or if you require any assistance with assembly or technical support please call us first for assistance at 866-780-7653. Thank you for your Sole purchase.

SOLE[™]
FITNESS